ITEMS INCLUDED

DRY WALL ANCHOR X 2

TILE ANCHOR X 2

#8 SCREW X 2

MOUNTING BRACKET X 1

1/4-28 SET SCREW X 1

1/8" HEX KEY X 1

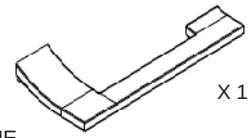 X 1

TISSUE HOLDER

TOOLS REQUIRED

PHILLIPS SCREW DRIVER 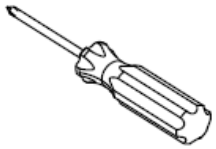

PEN / PENCIL 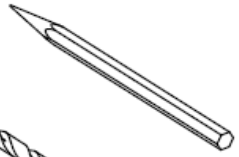

1/4" (6 mm) DRILL 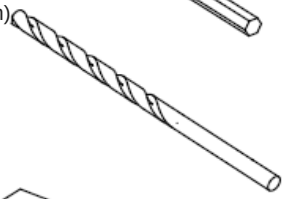

LEVEL SET 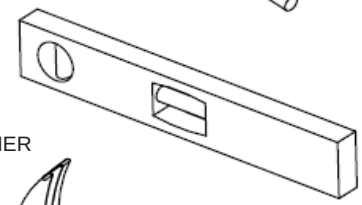

HAMMER 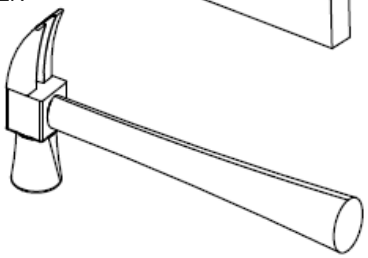

GNG-4706
EN-1294
REV -

CINU

INSTALLATION INSTRUCTIONS

4706

OPEN TOILET TISSUE HOLDER

GINGER®
Luxury For Your Lifestyle™

2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.GINGERCO.COM

1 REMOVE MOUNTING BRACKET

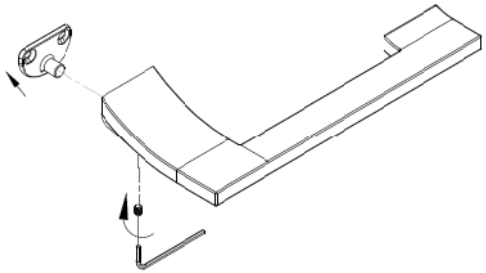

2 ALIGN MOUNTING BRACKET AND MOUNT LOCATION

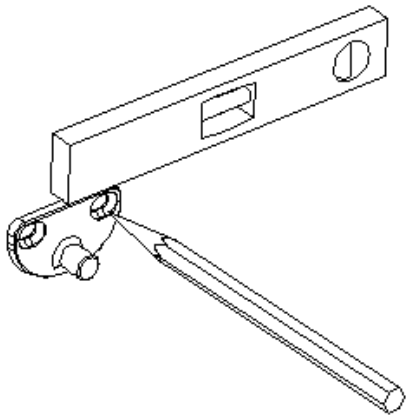

3 DRY WALL INSTALLATION

DO NOT DRILL

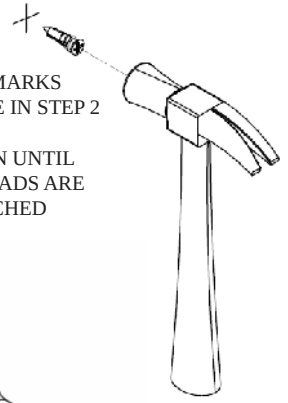

USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

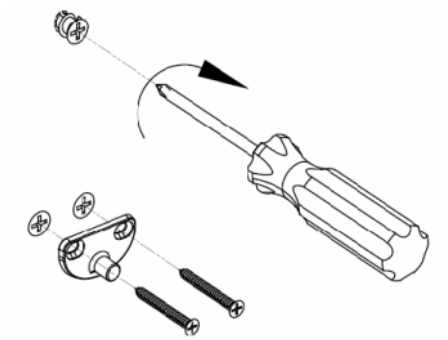

4 TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

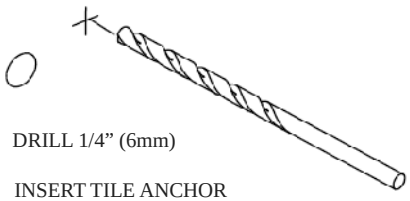

DRILL 1/4” (6mm)

INSERT TILE ANCHOR

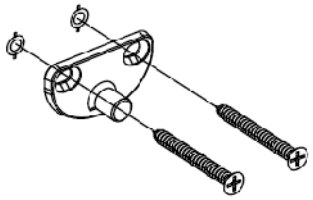

5 INSTALL PRODUCT ONTO BRACKET

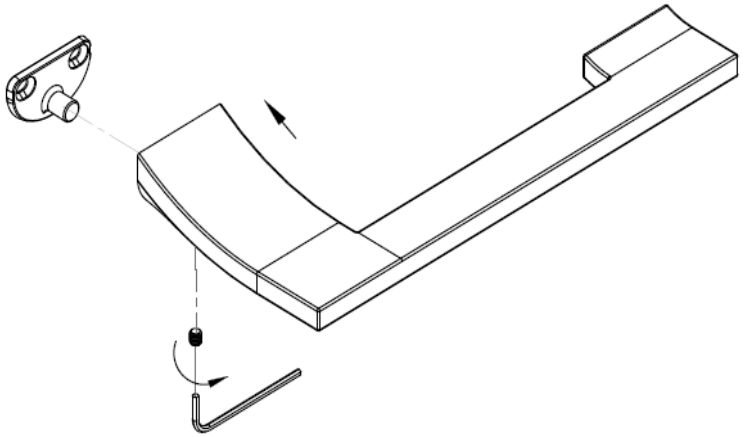

SECURE WITH SET SCREW